

## FlexPAK 1000 DX

The leading extraction solution. Always the right capacity.



The FlexPAK Dx high vacuum unit is designed for the extraction of grinding dust, metal chips etc. FlexPAK Dx is also suitable for cleaning the workplace, the shop floor, and machines. The FlexPak Dx's controls allows it to regulate air flow to exact demand needed resulting in efficient operation and energy savings.

The system's filter cleaning process allows you to have longer filter life and ensures adequate air flow performance. The FlexPAK Dx has many options available such as waste bin level monitors, filter indicators and fire alarms to help keep your workplace safe and working efficient.

The FlexPAK Dx is the answer to multi-purpose dust control for ontool extraction and work space housekeeping.

- Easy to install
- Built in PLC functions
- Low running and maintenance costs
- Built in safety functions
- Suitable for a wide range of applications

Product name	FlexPAK 1000 DX	
Noise level (dB(A))	70	
Compressed air requirement	Dry and clean (Ø6 connection)	
Installation	Indoor, Outdoor	
Filter cleaning method	Reverse air pulse	
Application	Dust, Granulate, Grit, Fumes, Swarf	
Working pressure (kPa)	15	
Dustbin volume (I)	70	
Max Airflow (m3/h)	1000 @ -15 kPa	
Filter Area (m²)	6	















## FlexPAK 1000 DX



24-10-2023

## FlexPAK 1000 DX

	Accessory	Part No
0	Deflector 220x540	40376771
0	Diff.pressure switch 3-15 kPa NC	40375273
	Bin Level lindicator (BLI) EX	40375269
	Fire alarm complete.	40116540
	Flanged pipe Ø 150, 1 m	40375263*
	Flanged pipe d150, 0,5m	40376525*
	Flanged bend 90° Ø 150	40375264*
	Flanged bend 45° Ø 150	40376770*
	Silencer LT160	40139090
	Bend spiro BU 160mm 90dgr	40130810
	Grating spiro 160mm	40130230
	Replacement plastic Bag 730x900, 20pcs, in dissipative material for EX applications	40118800
8	Flanged trans.pipe0,2m DN150 B-Flap	40376973
	Adapter flange/flange DN150 B-Flap	40376976

<sup>\*</sup>Pressure resistant pipes and bends for installation between filter inlet and the isolation valve. An adapter is needed between the pipe ans isolation valve flanges. Fasteners and seals are included.



## FlexPAK 1000 DX



