

Fan controls



Less heated air is extracted to outside, and less electricity consumed if the fan operates only while work is in progress. Switch the fan on/off manually at the hood, or automatically with a sensor clamp. Single-phase power supply to the operation box. The automatic fan control has a sensor clamp to be attached to the earth cable of the welding set for automatic start-up of the fan. Detects currents from 8 A. The operation box consists of a 30 VA transformer for the lighting kit in the extraction arm, a delay timer for fan stop variable from 0-5 minutes, and two separate connections for sensor clamps.

Product name	Fan controls
Note	One sensor clamp included




Fan controls

[image]	Description	[model]
	Manual fan control. 1 - 5 A, 3 phase.	14518637
	Manual fan control. 3,2 - 11,5 A, 3 phase.	14518737
	Manual fan control. 1 - 5 A, 1 phase.	14518837
	Manual fan control. 3,2 - 11,3 A, 1 phase.	14518937
	Automatic fan control. 1 - 5 A, 3 phase.	14519037*
	Automatic fan control. 3,2 - 11,5 A, 3 phase.	14519137*
	Automatic fan control. 1 - 5 A, 1 phase.	14519237*
	Automatic fan control. 3,2 - 11,3 A, 1 phase.	14519337*

*One sensor clamp included

Fan controls

	[accessory]	[partno]
	Sensor clamp to be attached to the earth cable of the welding power source.	14372199