
NO. 148675-01 DATE 2020-11-11

CHANGING THE SPRING DISMANTLING

WARNING!

Risk of personal injury!


- Before starting any operation in the reel, release the spring tension in the following way:
- 1. Push the safety catch.
- 2. Remove the hose stop and the nozzle.
- 3. Take a steady grip in the hose and draw out the safety catch.
- 4. Allow the hose to recoil untill the spring tension is completely released.
- 5. Push the safety clamp
- Follow these instructions carefully when handling the spring.
- It is recommended to dismantle the reel from wall or ceiling.

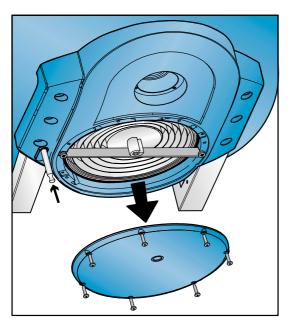


Unscrew the plastic cover.

IMPORTANT!


Check the rivet which holds the spring together and is positioned at the spring periphery. If the rivet is damaged, the spring must not be removed from the gable. The gable including spring must in that case be changed as one unit.

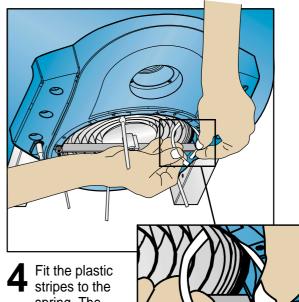


spring. The stripes comes in the package together with the new spring.

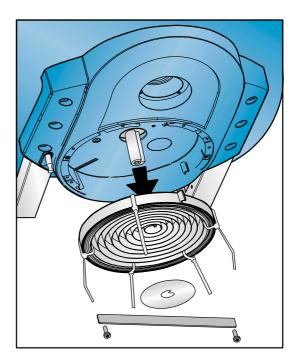

 - Remove the safety clamp and the washer.
- Remove the damaged spring.



ASSEMBLING

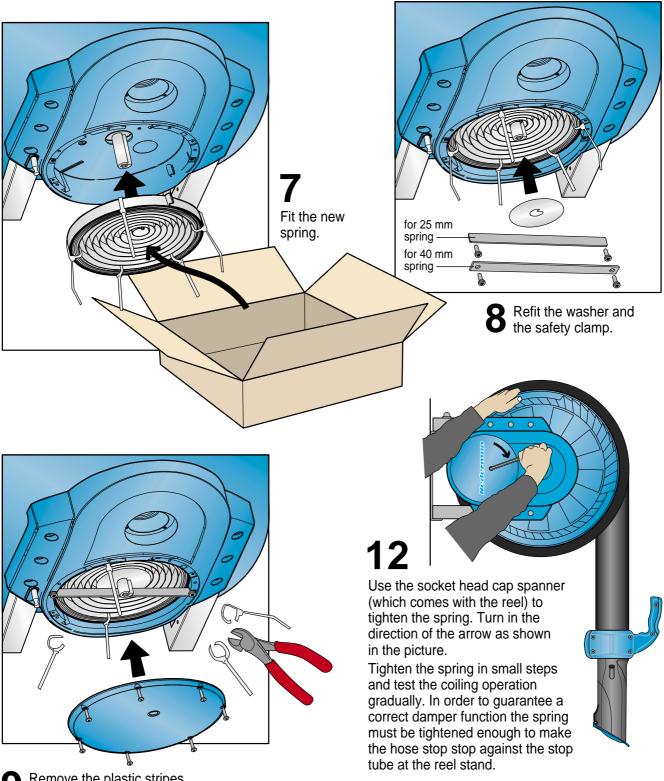

9 Remove the plastic stripes and fasten the plastic cover.

10 Remount the reel on intended place.

Refit the hose stop and the nozzle.

13 Check that the hose can be fully uncoiled without stretching the spring to its maximum.

Depositing of used spring unit

The used spring should be deposited to steelworks for remelting or handled according to valid deposit rules.