

Check the rated current on the fan motor identification plate and set the motor protector accordingly.

