


Over flow control for waste oil tank

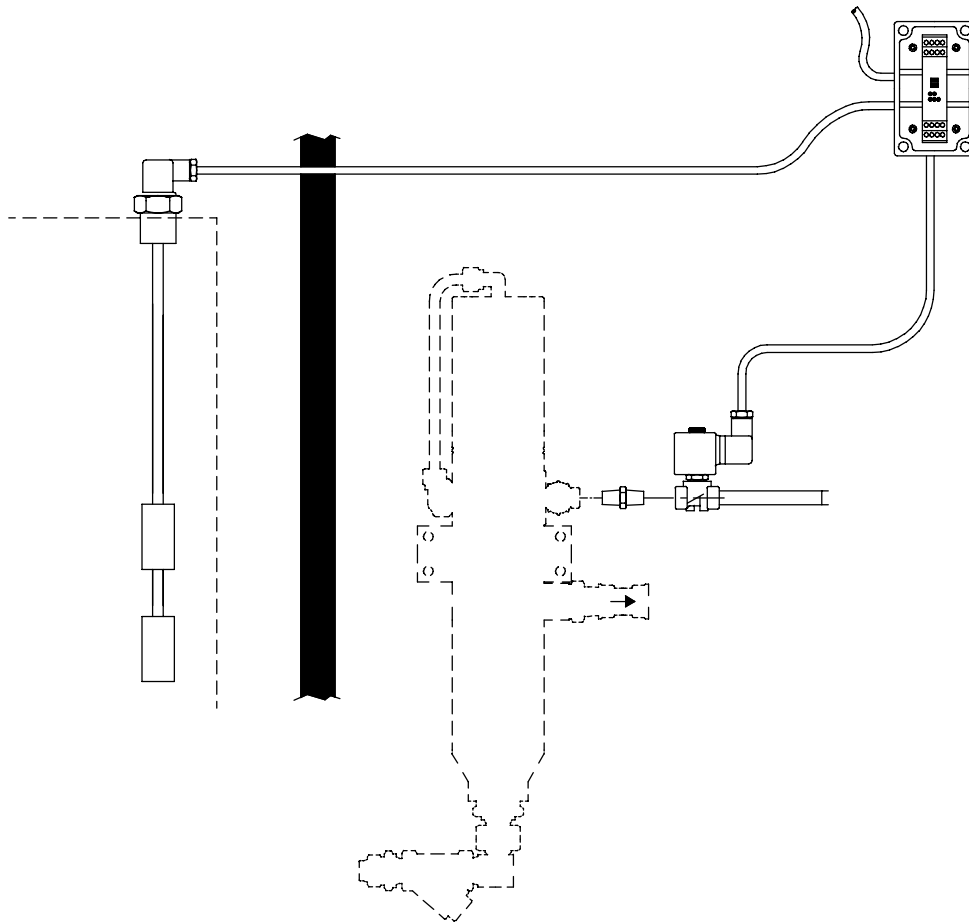

Original instruction manual

EN INSTRUCTION MANUAL

Translation of original instruction manual

SV ANVÄNDARMANUAL

(EN) FUNCTION

See Figure 2.

Green lamp lights up when the relay is powered.

At high level the yellow lamp 2 and the external lamp, if any, lights up.

At stop level the yellow lamp 1 lights up and the solenoid valve closes the air to the pump.

The switches 1 and 2 shall be switched to position I (in position II the relay function is inverted).

NOTE! After installation, check the function above.

(SE) FUNKTION

Se Figur 2.

Grön lampa lyser då relät har spänning.

Vid hög nivå tänds gul lamp 2 samt eventuell extern lamp.

Vid stoppnivå tänds gul lamp 1 och magnetventilen stänger luften till pumpen.

Brytarna 1 och 2 ska vara i läge I (i läge II inverteras reläts funktion).

OBS! Efter installation måste funktionen enligt ovan kontrolleras.

