

Manuell viftestart (FMS)

En rekke viftestartere er egnet for N-serien, mindre NCF-vifter og NOM-filtre.



Manuell viftestart (FMS)

- ✓ Overbelastningsvern for motoren er inkludert
- ✓ Både for enfase- og trefasevifter

Manuell viftestart (FMS)

Sertifiseringer	CE
Beskyttelsesklasse:	IP66

Models

	Item number	Strømstyrke (A)
	14503137	18 - 25
	14502137	1,0 - 1,6
	14502237	1,6 - 2,5
	14502337	2,5 - 4,0
	14502437	4,0 - 6,3
	14502537	6,3 - 10
	14502637	10 - 16