

Fan controls











Fan controls

Less heated air is extracted to outside, and less electricity consumed if the fan operates only while work is in progress. Switch the fan on/off manually at the hood, or automatically with a sensor clamp. Single-phase power supply to the operation box. The automatic fan control has a sensor clamp to be attached to the earth cable of the welding set for automatic start-up of the fan. Detects currents from 12 A. The operation box consists of a 30 VA transformer for the lighting kit in the extraction arm, a delay timer for fan stop variable from 0-5 minutes, and two separate connections for sensor clamps.

Fan controls


Certifications	CE
----------------	----

Models

	Item number	Capacity
	14518637	Manual 3~, 1 - 5 A
	14518737	Manual 3~, 3,2 - 11,5 A
	14518837	Manual 1~, 1 - 5 A
	14518937	Manual 13~, 3,2 - 11,5 A
	14519037 ^[1]	Auto 3~, 1 - 5 A
	14519137 ^[1]	Auto 3~, 3,2 - 11,5 A
	14519237 ^[1]	Auto 1~, 1 - 5 A
	14519337 ^[1]	Auto 1~, 3,2 - 11,3 A

^[1] One sensor clamp included

Accessories

	Accessory	Item number
	Sensor clamp to be attached to the earth cable of the welding power source.	14372199