

Installation instruction




Remove the four screws on the front of the inverter and take off the front cover.

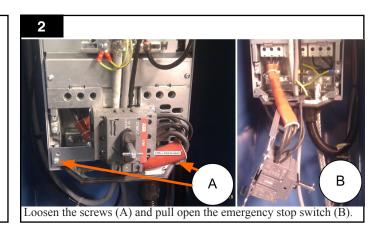


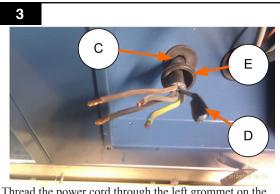


Thread the power cord through the left grommet on the cabinet as shown (C). Isolate any neutral conductor with heat shrink tape (D).

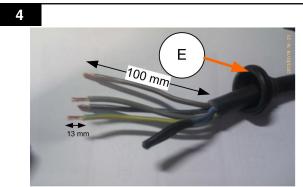


Put on the supplied rubber grommet (E). Strip the power cable insulation 10 cm. Strip the wire insulation 13mm.

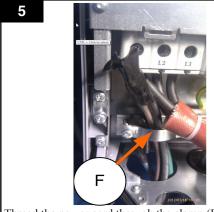


Thread the power cord through the clamp (F).

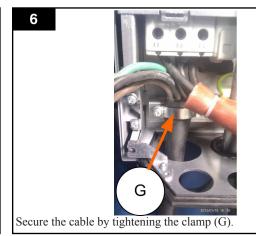


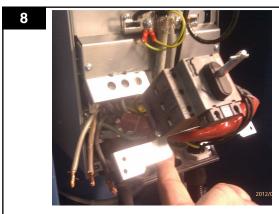

Replace and secure the emergency stop switch (B).

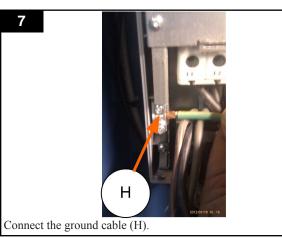

FlexPAK Vacon Fan Inverter installation

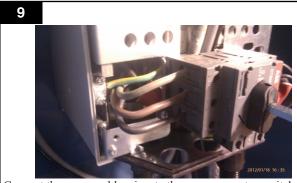

Connect the power cable wires to the emergency stop switch. Make sure to only clamp the wire and not its insulation, which creates a poor contact and damages both the power cable and the emergency stop switch.



Replace the fan inverter's front cover and tighten the four screws.

